

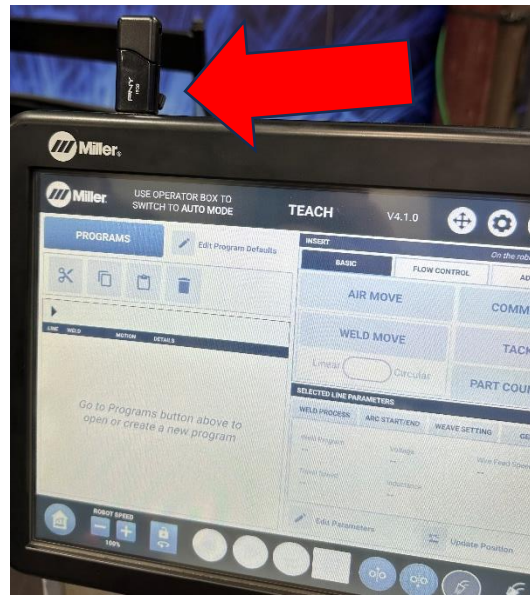
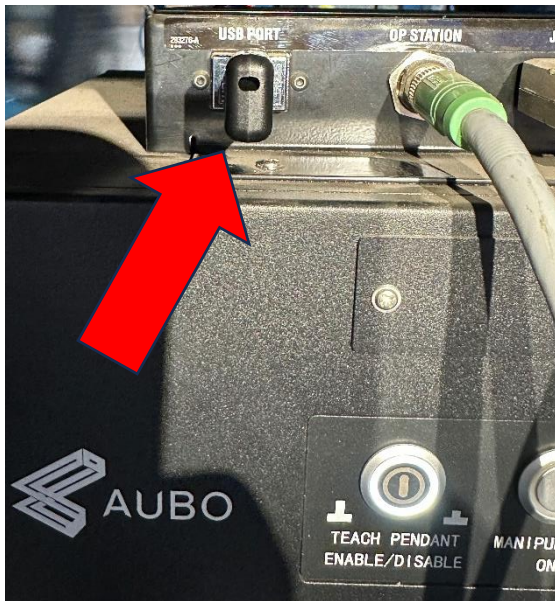


# Miller Copilot Software Update Instructions

1. Insert preloaded USB with the latest version of software into the USB port on the controller located on the back of the Copilot, or in the teach pendant port if available.

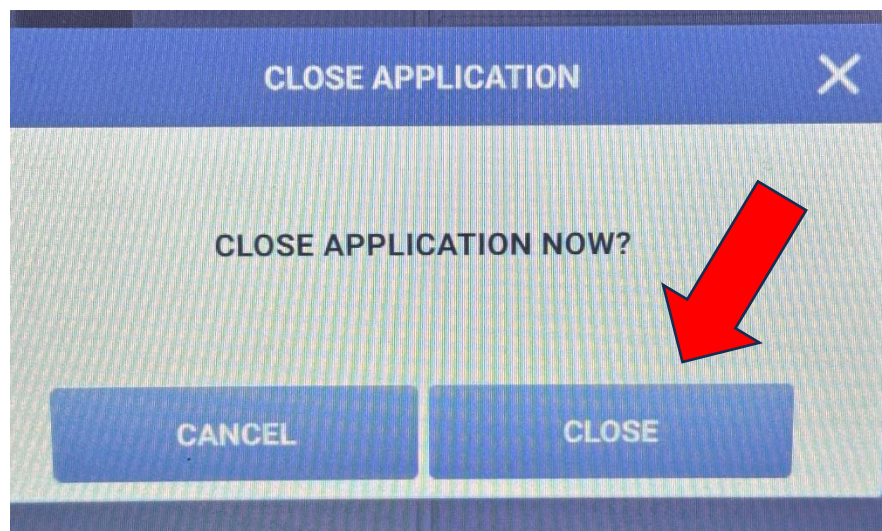



2. Exit the Miller UI by tapping on the power icon on the screen and confirming close.

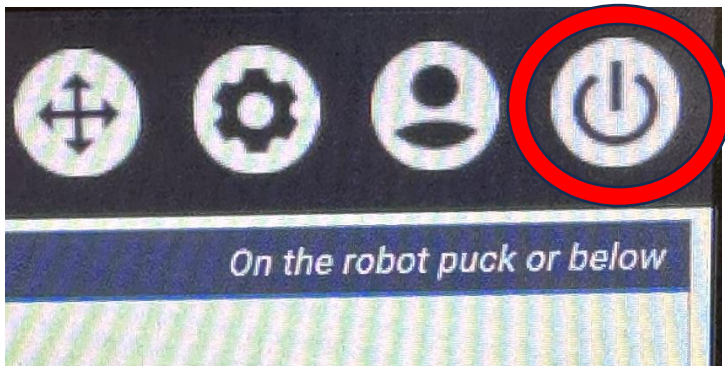

- This will bring you to the desktop screen. Double tap on the Miller Update icon that is green.





- This will initiate the first part of the update, and then count down to the forced shut down.

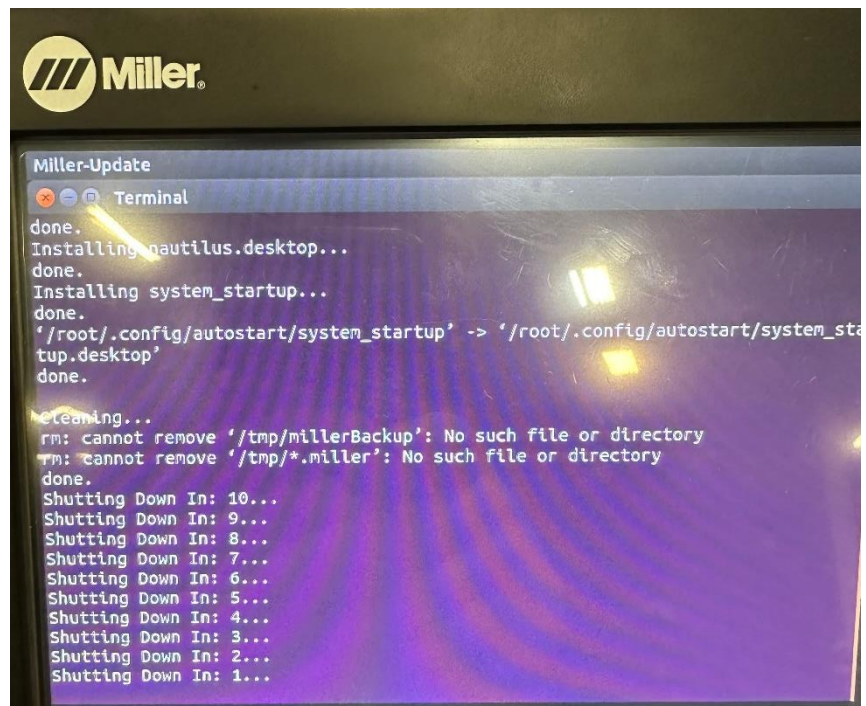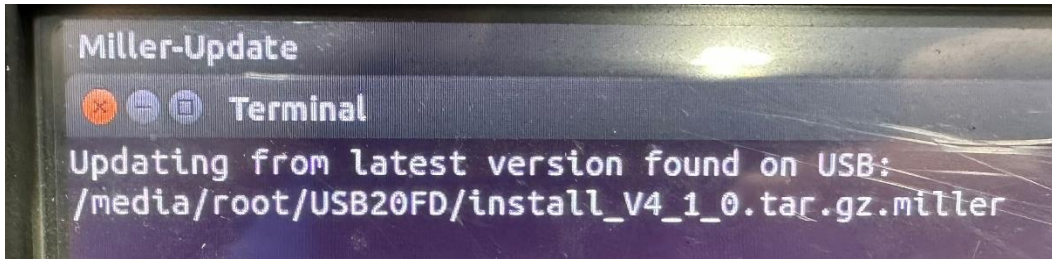

5. Wait for the standby light to turn on, on the back of the controller. Then power the pendant back up.





6. After powering the pendant back on this will initiate the second half of the update where the firmware is seated. This will also have a forced shut down at the end of the update.

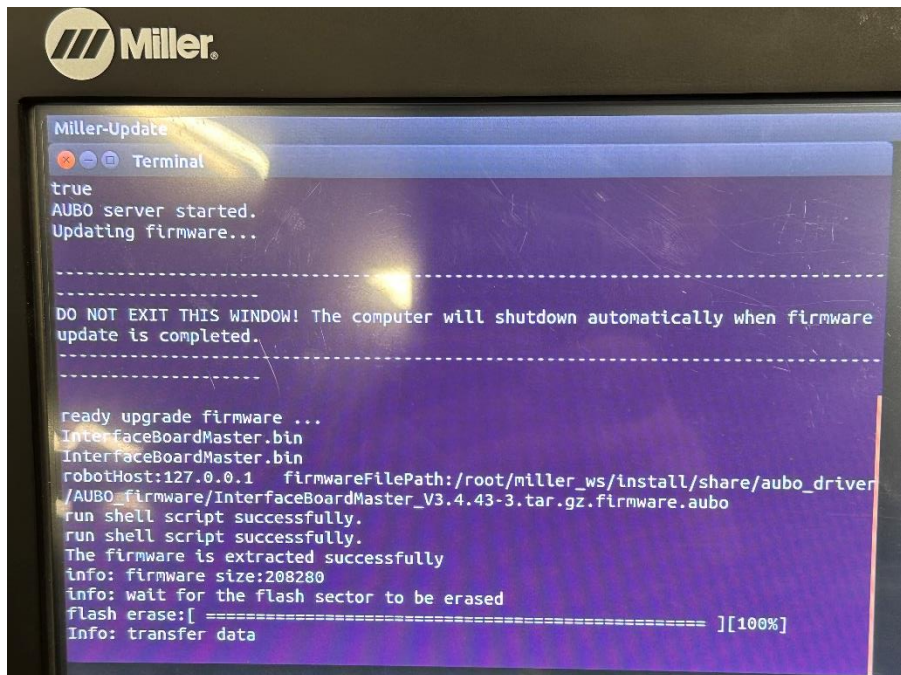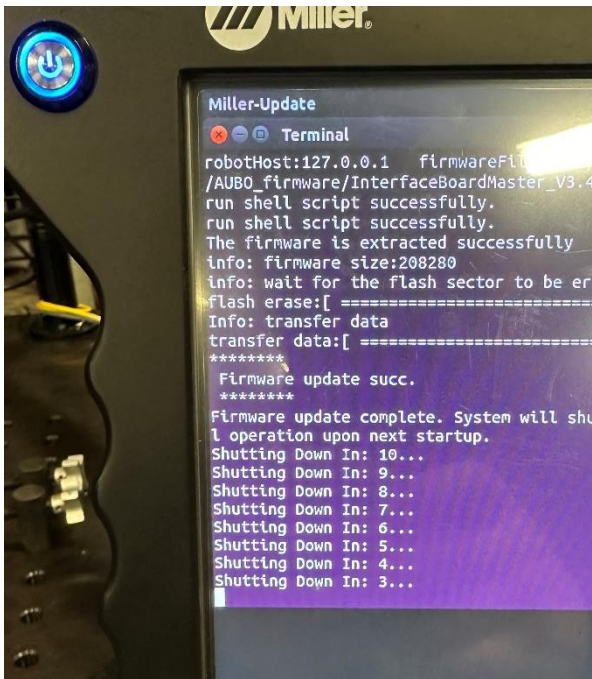

- When the standby light turns on, on the back of the controller. Turn the Pendant back on again.



- Depending on which power source the system has installed, you may get a communication error. Clear the error, you still will be able to click on the settings icon during the booting process to change the power source selection.

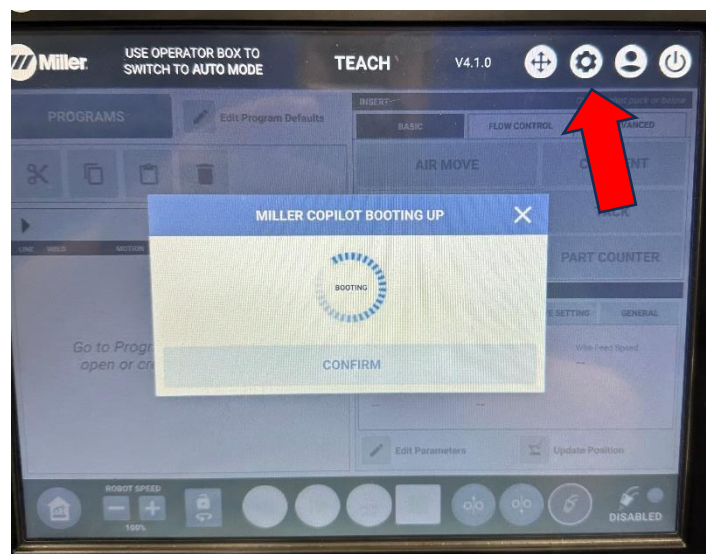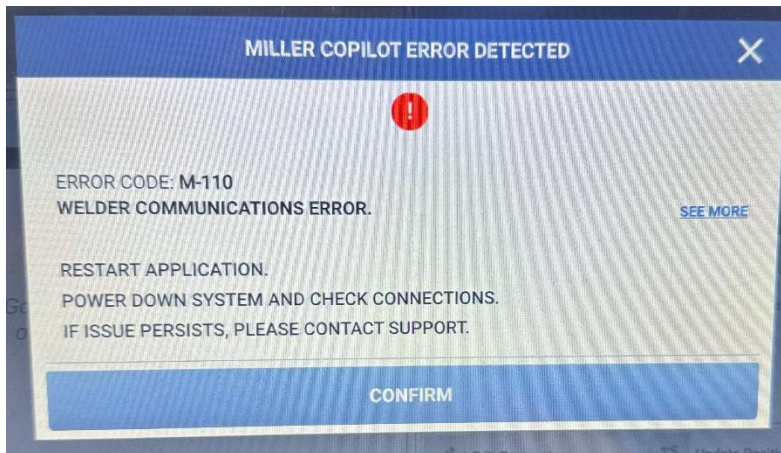

9. Go into settings, system, and select your correct power source for your Copilot. If you do need to change the power source selection, you will have to reboot the Copilot software.

