

Remote Controls

Foot, Hand and Fingertip Remote Controls 

Foot Controls



RFCS-14 HD shown.

RFCS-14 HD (14-pin plug)* 194744
RFCS-5 HD (5-pin plug)** 195218

Heavy-duty foot pedal current and contactor control provides increased stability and durability from larger base and heavier cord. Maximum flexibility is accomplished with a reconfigurable cord that can exit the front, back or either side of the pedal. Includes 20-foot (6 m) cord with plug.

RFCS-6M (6-pin plug)
195183 13.25 ft. (4 m) cord
195504 20 ft. (6 m) cord

Same heavy-duty foot pedal as above, but for Maxstar® 161 STL, Maxstar 161 STH, and Multimatic™ 200.



RFC-23 242199020

For Dialarc® 250 AC/DC. Foot pedal current and contactor control. Includes 20-foot (6 m) cords with plugs.

Note: Adapter no longer available.



RFCS-RJ45 300432

For Diversion™ 165, Diversion 180 and Multimatic 215. Foot pedal current and contactor control. Includes 14-foot (4.3 m) cord with plug.

Hand Controls



RHC-14 (14-pin plug)*

242211020 20 ft. (6 m) cord
242211100 100 ft. (30.5 m) cord

Miniature hand current and contactor control. Dimensions: 4 x 4 x 3.25 inches (102 x 102 x 83 mm). Includes cord with plug.



RHC-3 242210020

For Dialarc 250 AC/DC. Hand amperage control. Includes 20-foot (6 m) cord with plug.

Note: Adapter no longer available.



RHC-3GD34A 041122

For Big Blue® 400 CC and 500 CC. Hand amperage or voltage control. Includes 20-foot (6 m) cord with plug.



PRHC-14 195511

Complete current or voltage control brings 120 volts of GFCI power to work area in a single cord. Housed in a durable and light aluminum case and includes 125-foot (38 m) cord with plugs.

* For Miller solid-state power sources AFTER serial number JK674521.
 ** For Miller solid-state power sources BEFORE serial number JK674521.



Miller Electric Mfg. LLC
 An ITW Welding Company
 1635 West Spencer Street
 P.O. Box 1079
 Appleton, WI 54912-1079 USA

Equipment Sales US and Canada
 Phone: 866-931-9730
 FAX: 800-637-2315
 International Phone: 920-735-4554
 International FAX: 920-735-4125

MillerWelds.com



Fingertip Controls



RCC-14 (14-pin plug)* 151086
RCC-5 (5-pin plug) 157365**

East/west rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for production or contractors that need quick ramp-up. Includes 26.5-foot (8 m) cord with plug.

RCC-6M (6-pin plug) 301118

Same as above, but for Maxstar® 161 STL, Maxstar 161 STH and Multimatic™ 200. Includes 13.25-foot (4 m) cord with plug.



RCCS-14 (14-pin plug)* 043688
RCCS-5 (5-pin plug) 043718**

North/south rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for applications that require a finer amperage control. Includes 26.5-foot (8 m) cord with plug.

RCCS-6M (6-pin plug)

195184 13.25 ft. (4 m) cord

195503 26.5 ft. (8 m) cord

Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.

RCCS-RJ45 301146

For Diversion™ 165, Diversion 180 and Multimatic 215. Includes 13.25-foot (4 m) cord with plug.



RMLS-14 (14-pin plug)* 129337

Momentary- and maintained-contact rocker switch for contactor control. Push forward for maintained contact and backward for momentary contact. Includes 26.5-foot (8 m) cord with plug.



RMS-14 (14-pin plug)* 187208

Momentary-contact switch for contactor control. Rubber-covered pushbutton dome switch ideal for repetitive on-off applications. Includes 26.5-foot (8 m) cord with plug.

RMS-6M (6-pin plug) 195269

Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.



RPBS-14 (14-pin plug)* 300666

Attaches to the TIG torch to remotely start and stop the TIG welding process. Includes 25-foot (7.6 m) cord with plug.

Wireless Remote Controls



Wireless Remote Foot Control 301580

For remote current and contactor control. Receiver plugs directly into

the 14-pin receptacle of Miller machine. 90-foot (27.4 m) operating range. See literature AY/6.5 for more information.



Wireless Remote Hand Control 301582

For remote current, voltage and contactor control. Receiver plugs directly into the 14-pin receptacle of Miller machine. Up to 300-foot

(91.4 m) operating range. See literature AY/6.6 for more information.

Extension Cables

Extension Cables

242208010 10 ft. (3 m)

242208025 25 ft. (7.6 m)

242208050 50 ft. (15.2 m)

242208080 80 ft. (24.4 m)

242208100 100 ft. (30.5 m)

For 14-pin remote controls/24 VAC wire feeders. 14-pin plug to a 14-pin socket. (Not for 115-volt XR™ or 50 Series feeders.)

Adapter Cords



14-Pin to 6-Pin Adapter Cord 300507

For Maxstar 161 STL, Maxstar 161 STH and Multimatic 200. 12-inch (305 mm) cord adapts Miller 14-pin foot control or fingertip control to a 6-pin plug.



10-Pin to 14-Pin Adapter Cord 301545

For Multimatic 235 and Multimatic 255. Allows standard 14-pin TIG remote controls to be used with the Multimatic 235 and 255.

14-Pin to 5-Pin Adapter Cord 130003

18-inch (457 mm) cord adapts Miller 14-pin foot control or fingertip control to a 5-pin plug.

RJ45 to 14-Pin Adapter Cord 300688

12-inch (305 mm) cord adapts Miller RJ45 foot control or fingertip control to a 14-pin plug.

* For Miller solid-state power sources AFTER serial number JK674521.

** For Miller solid-state power sources BEFORE serial number JK674521.

Distributed by:

